




HP dv5-1125nr Battery Replacement

This guide will go through the process of removing the battery.

Written By: Nick Loey

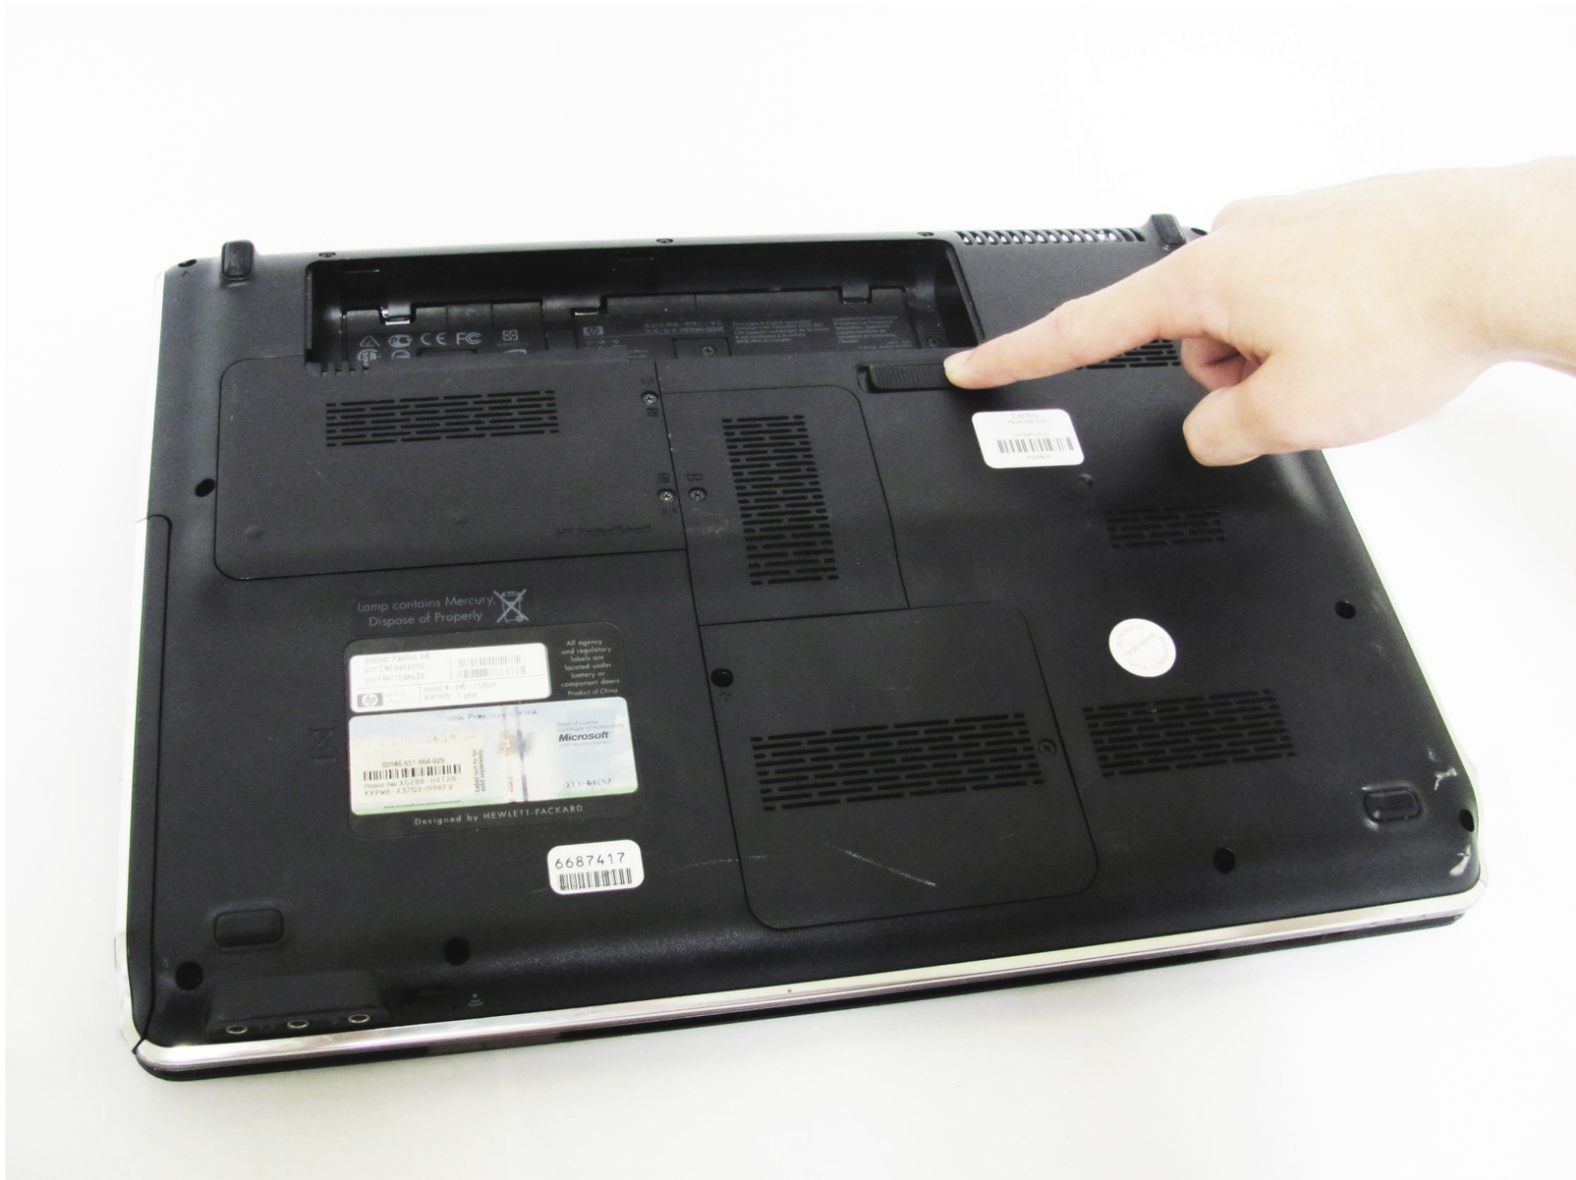

INTRODUCTION

Removing the battery is usually the first step to reaching the guts of any laptop. HP has utilized a simple one-switch release system to aid in the removal of the battery.



PARTS:


- [HP Pavilion Compaq Presario and DV Series Replacement Battery](#) (1)
-

Step 1 — Battery




- Ensure your computer is shut down.
- ⚠ Removing the battery while the laptop is still on may corrupt your files.
- Remove any power adapters and cords connected to the laptop body.
- Turn the computer over so the bottom is facing up.
- ⓘ These pictures show no battery, but your battery should still be in your computer at this point.

Step 2

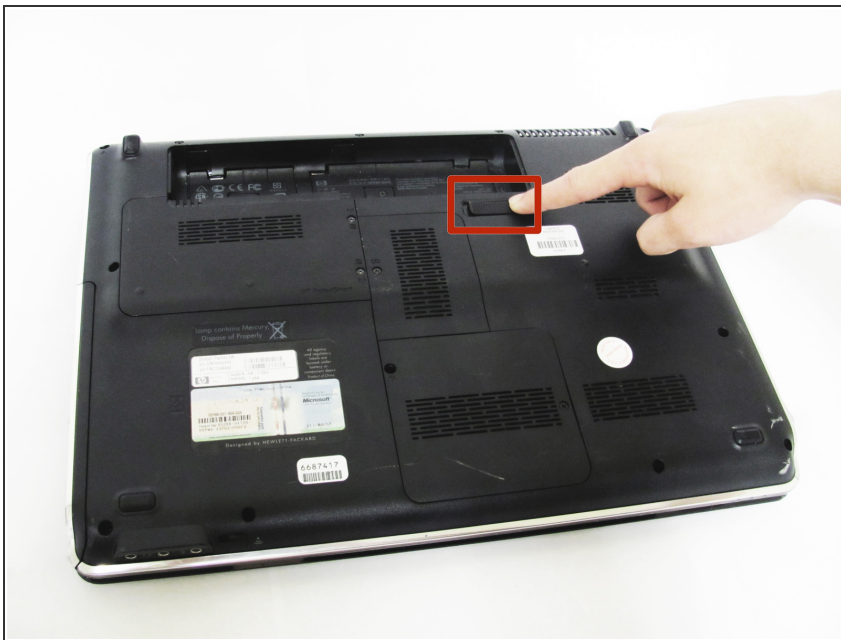

- The battery release is below the bottom right corner of the battery bay.
- Slide the switch to the right until the release clicks.

Step 3

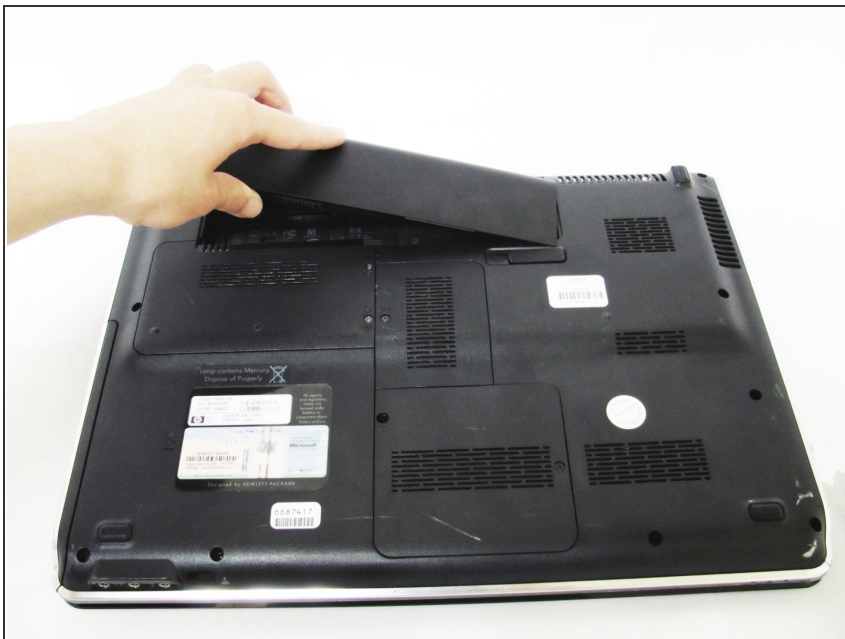

- Remove the battery.

i The release switch may need to be held down while removing the battery.

To reassemble your device, follow these instructions in reverse order. Note the release switch does not need to be held down to replace the battery.

This document was last generated on 2017-06-21 06:43:58 AM.